


Single Component Elastomeric Adhesive

### Rigid Insulation Board

All surfaces should be clean and free of contaminants before application.

### Application

- Apply a dollop about 2" in diameter, (one dollop per insulation pin) every 6" to 7".
- Press the insulation pin into the dollop of TREMGrip® and hold for 10-15 seconds. *(Optional: Tool the TREMGrip to cover the insulation pin.)*
- Once the insulation pin is adhered to the surface, place the mineral wool/rigid insulation board onto the insulation pins.

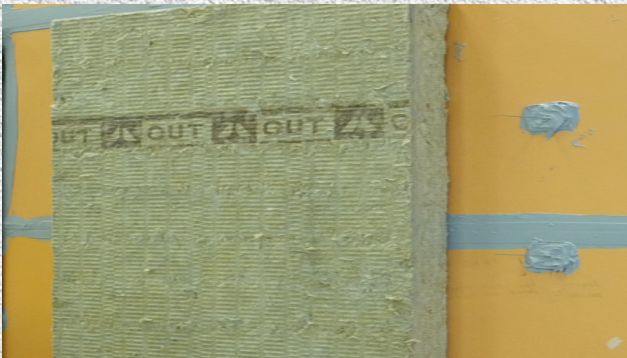

<b>Insulation Board</b>
1 ½ LBS, 1" thick
<b>Mineral Wool</b>
2 ½ LBS, 3" thick



SEE TREMGrip IN ACTION AT:  
<https://www.youtube.com/watch?v=qhHLrhn10I8>

Typical spray adhesives can eat away at your membrane.  
 TREMGrip is a no solvent solution.

**TREMCO®**  
 Commercial Sealants & Waterproofing  
[www.tremcosealants.com](http://www.tremcosealants.com)

3735 Green Road  
 Beachwood, OH 44122  
 216.292.5000 • 800.321.7906

1451 Jacobson Avenue  
 Ashland, OH 44805  
 419.289.2050 • 800.321.2050

220 Wicksteed Avenue  
 Toronto, ON M4H 1G7  
 416.421.3300 • 800.363.3213

TREMGrip® and Tremco® are registered trademarks of Tremco Incorporated. Use of the ® symbol indicates registration with the US Patent & Trademark Office and the Canadian Intellectual Property Office.