


OUTSIDE CORNER

1. SPECTREM SIMPLE SEA SHOULD BE WRAPPED TIGHTLY AROUND OUTSIDE CORNERS.
2. SUFFICIENT AMOUNT OF SPECTREM 1 MUST BE USED TO ENSURE THAT THE EXTRUSION REMAINS IN PLACE UNTIL THE ADHESIVE HAS CURED.
3. IF NECESSARY, ADHESIVE TAPE MAY BE USED TO HOLD THE EXTRUSION IN PLACE UNTIL THE SPECTREM 1 HAS SET UP.
4. AN ALTERNATE SOLUTION WOULD BE AN OUTSIDE CORNER BUTT JOINT.

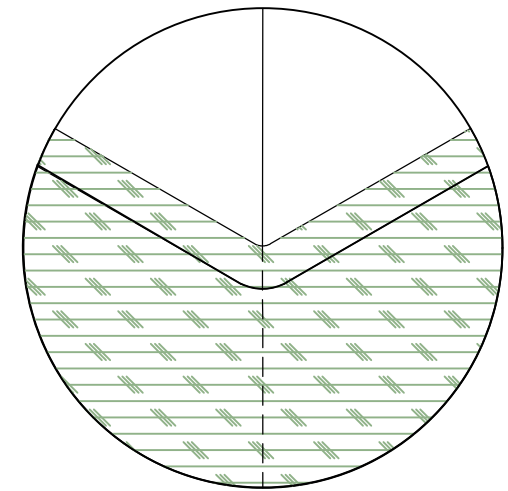

DETAIL A

The architecture, engineering, and design of the project using the Tremco products are the responsibility of the project's design professional. All products and systems must comply with local building codes and standards. This detail is for general information and guidance only and Tremco specifically disclaims any liability for the use of this detail. The project design professional determines, in its sole discretion, whether this detail or a functionally equivalent detail is best suited for the project. This detail is subject to change without notice. Contact Tremco to ensure you have the most recent version.

Spectrem Simple Seal



Detail: Spectrem Simple Seal at Outside Corner

File Name:

Drawn by: HDE

Checked by: AM

Scale: NTS

Date: 4/19/2022

SSS-C-03



Construction Products Group

Tremco Technical Support: 866-209-2404

www.tremcocpg.com